


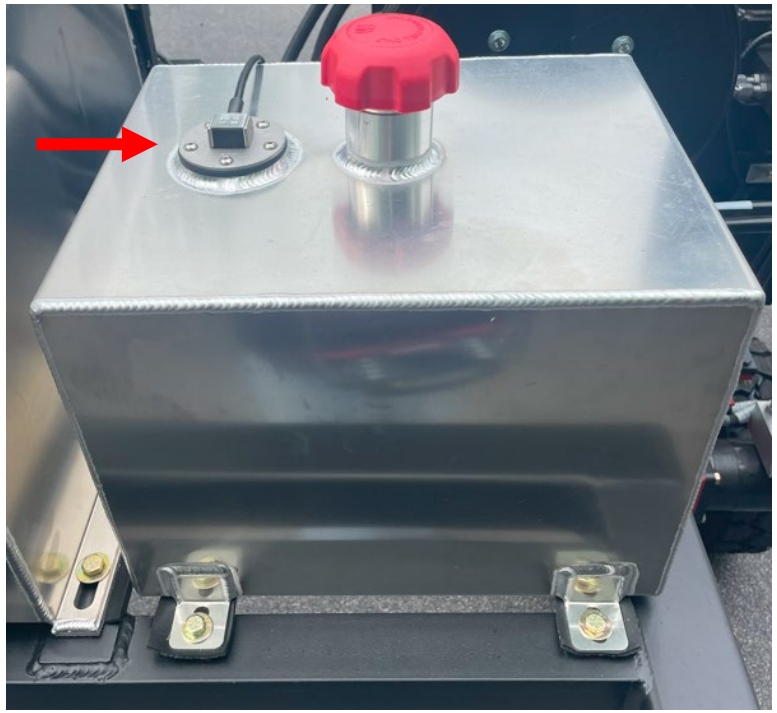

Service Bulletin


2 Wire Fuel Level Sensor Scaling Instructions

Model: RG Produced Units


Revision: - (initial)

Date: 6/19/24


Click the 3 Horizontal Lines in bottom left corner

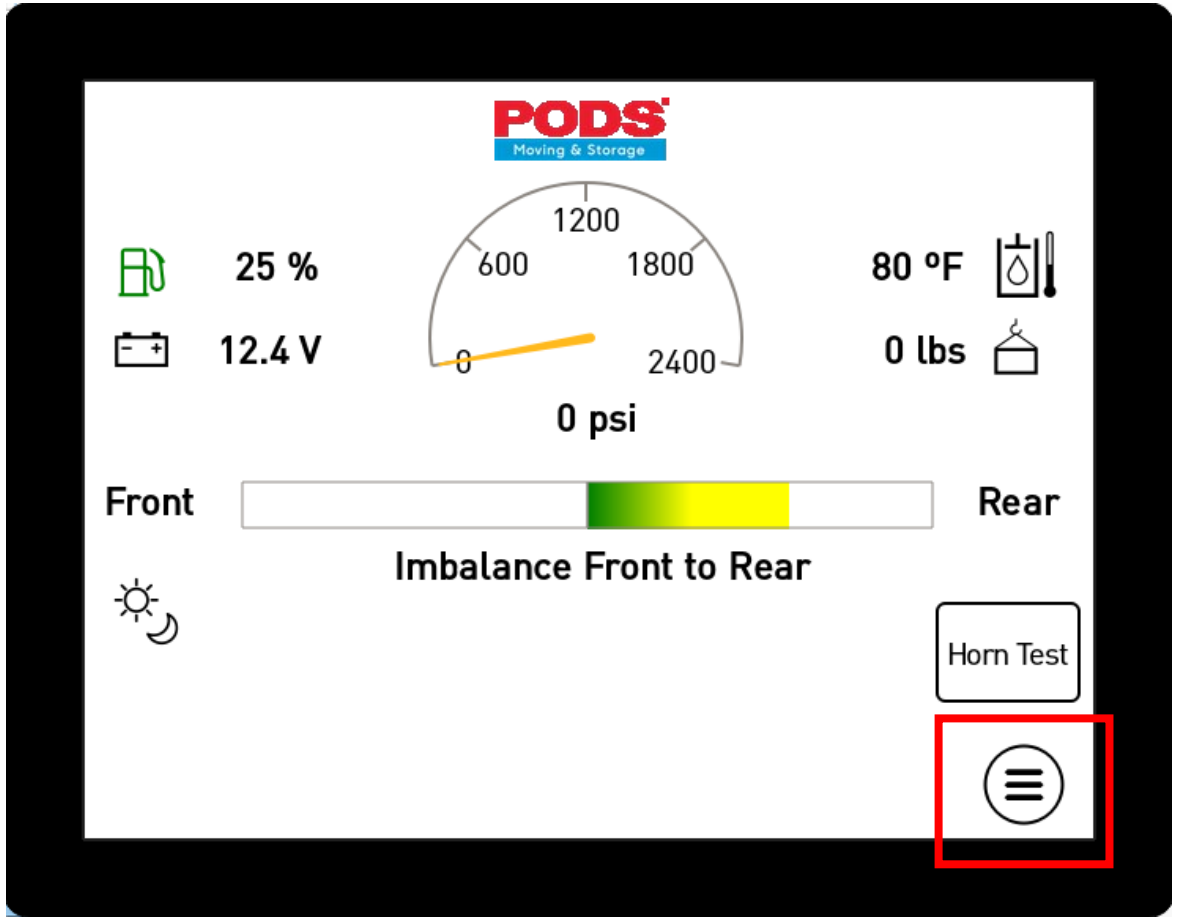


Select Adjust

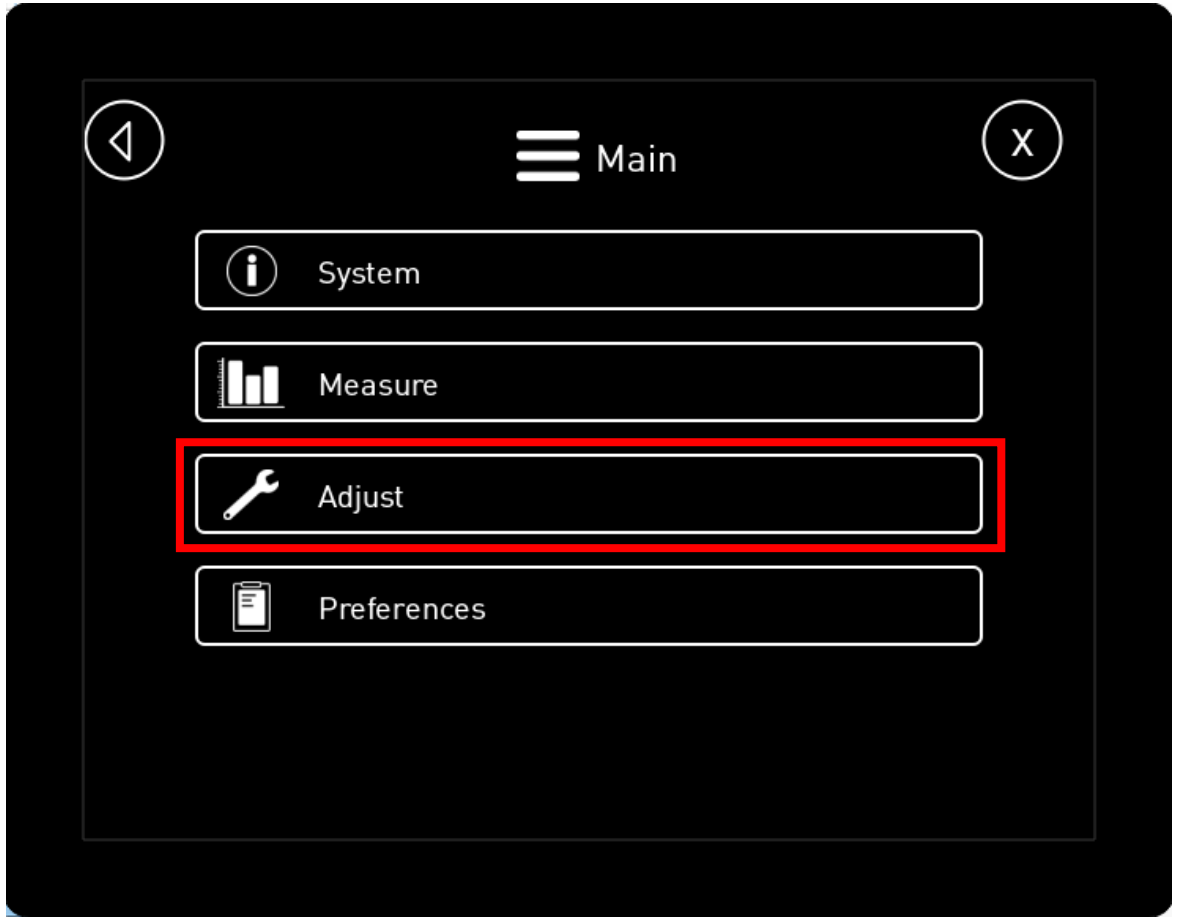


Select Sensor Groups

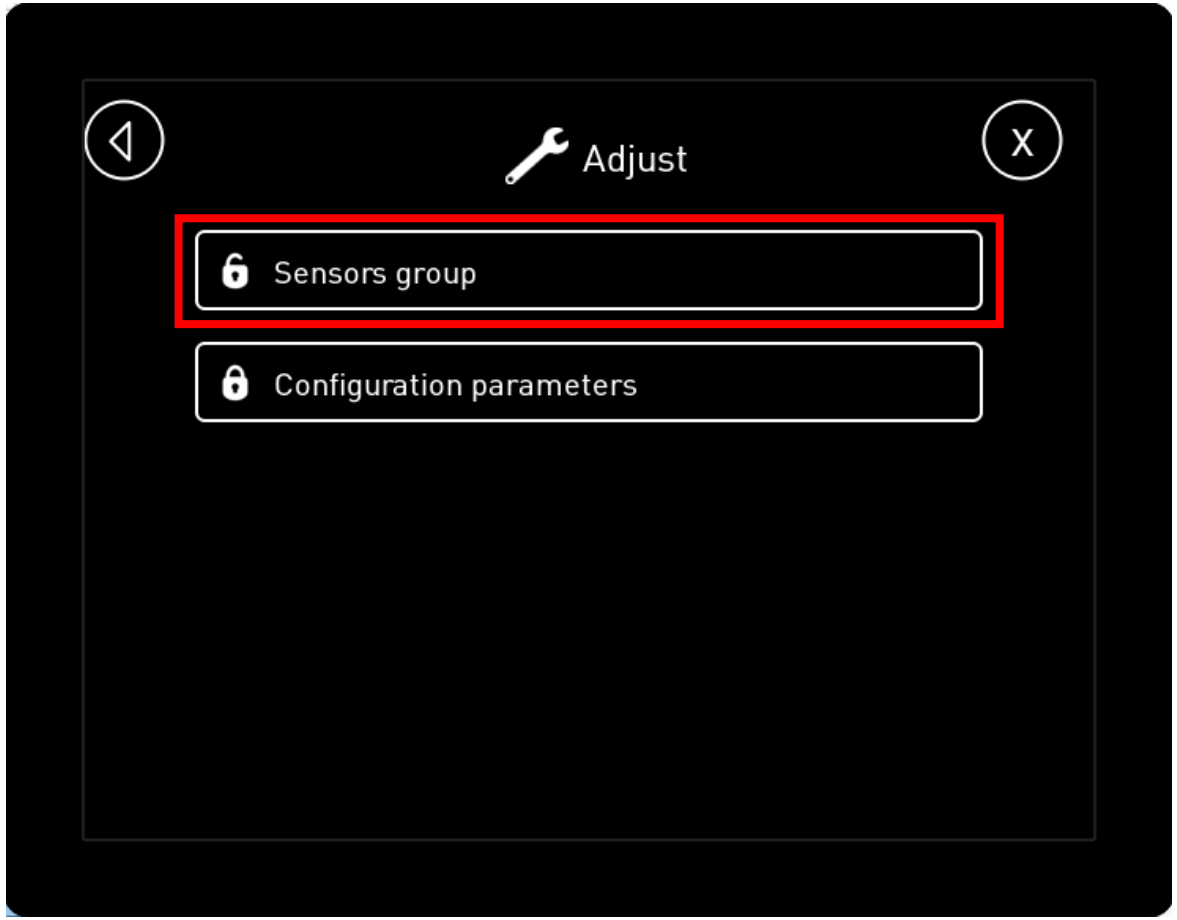


When prompted for the PIN, enter 2021, then OK

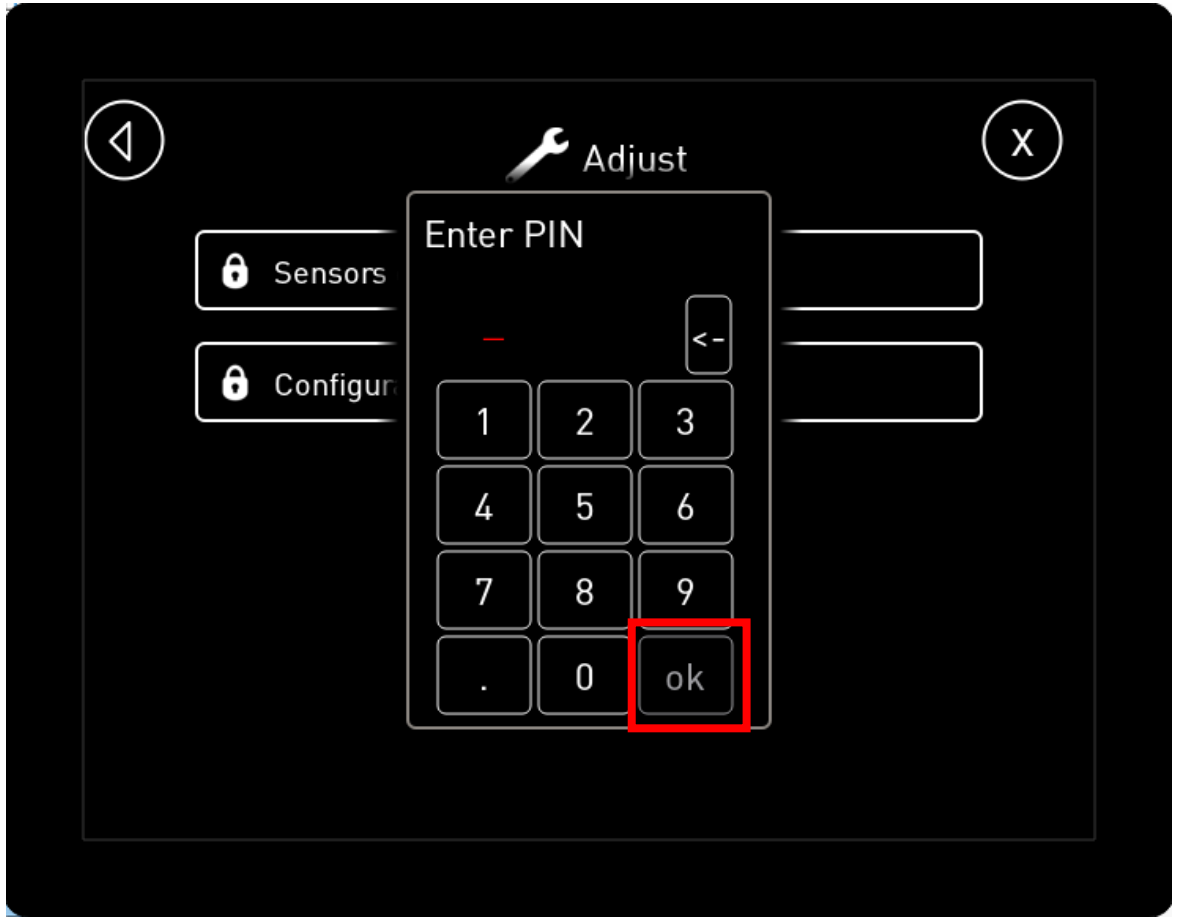


Click and Drag the middle of the screen to scroll the sensor group menu down. Scroll until you see Fuel Level

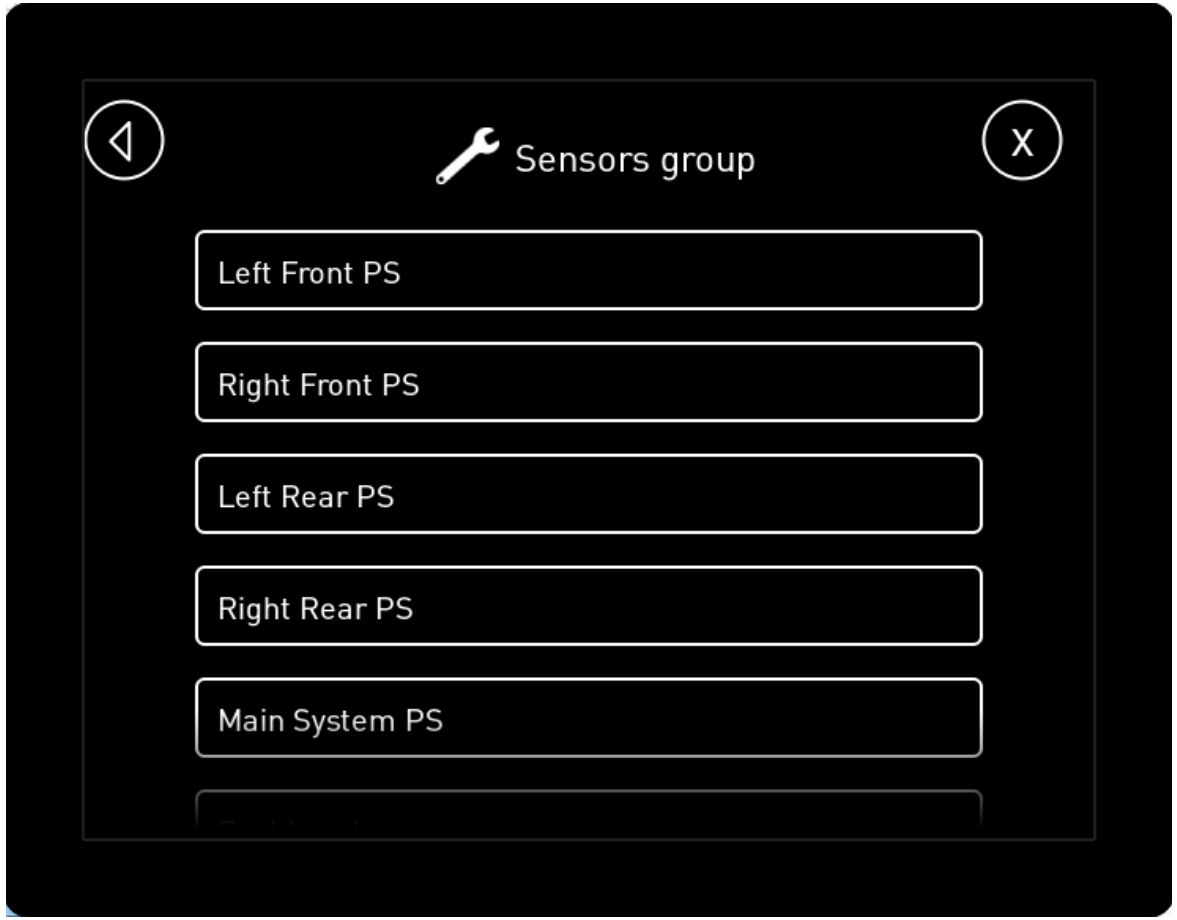


Select Fuel Level

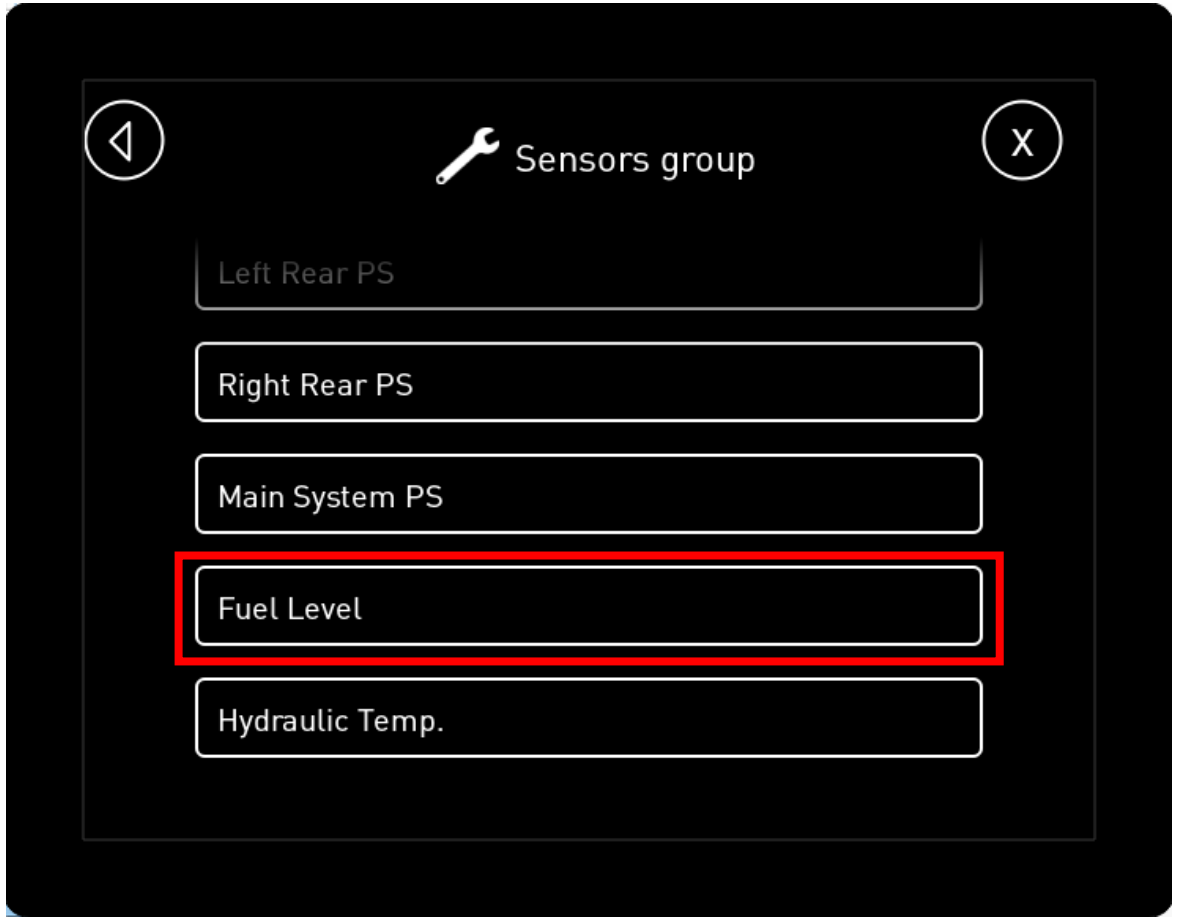


Click on Min value to bring up keypad and change it to 155 and click on Accept Button

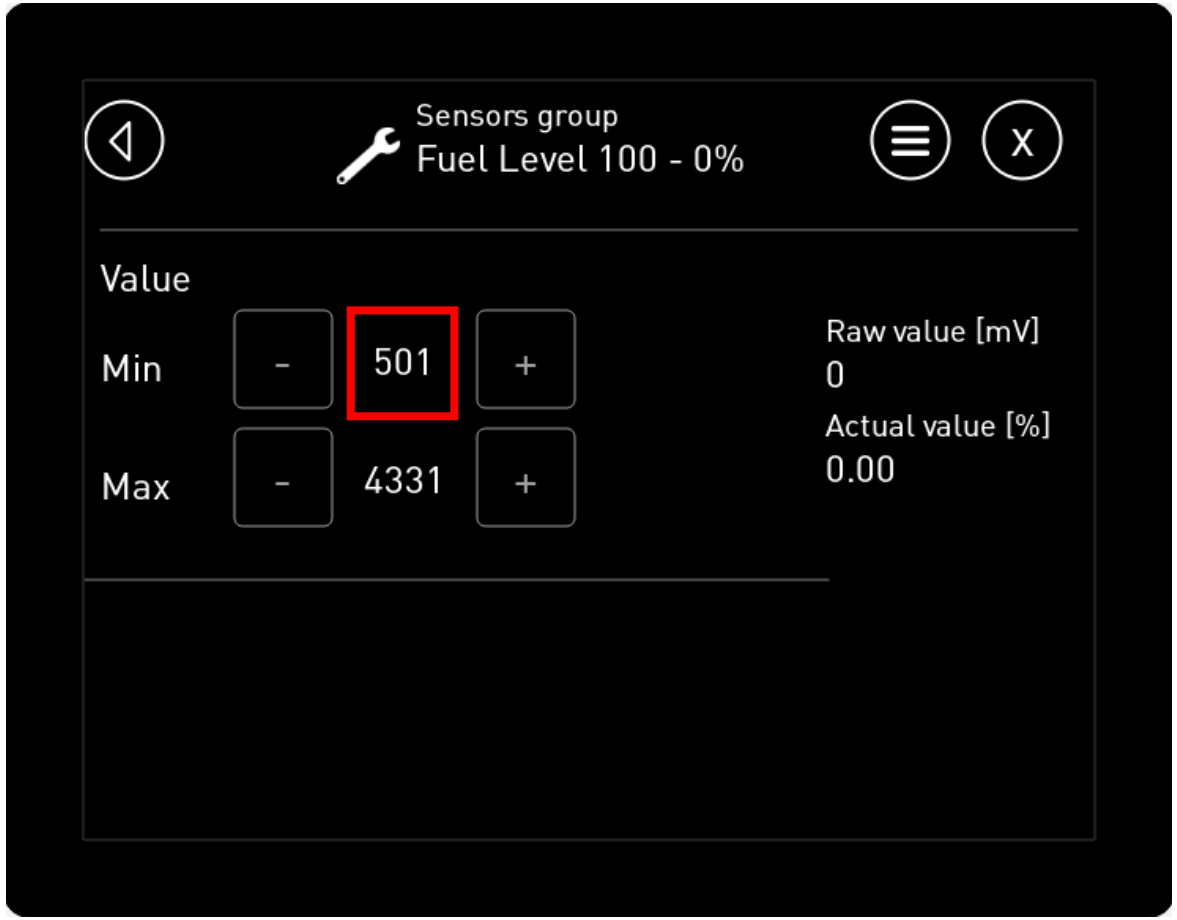

Click on Max value to bring up keypad and change it to 946 and click on Accept Button

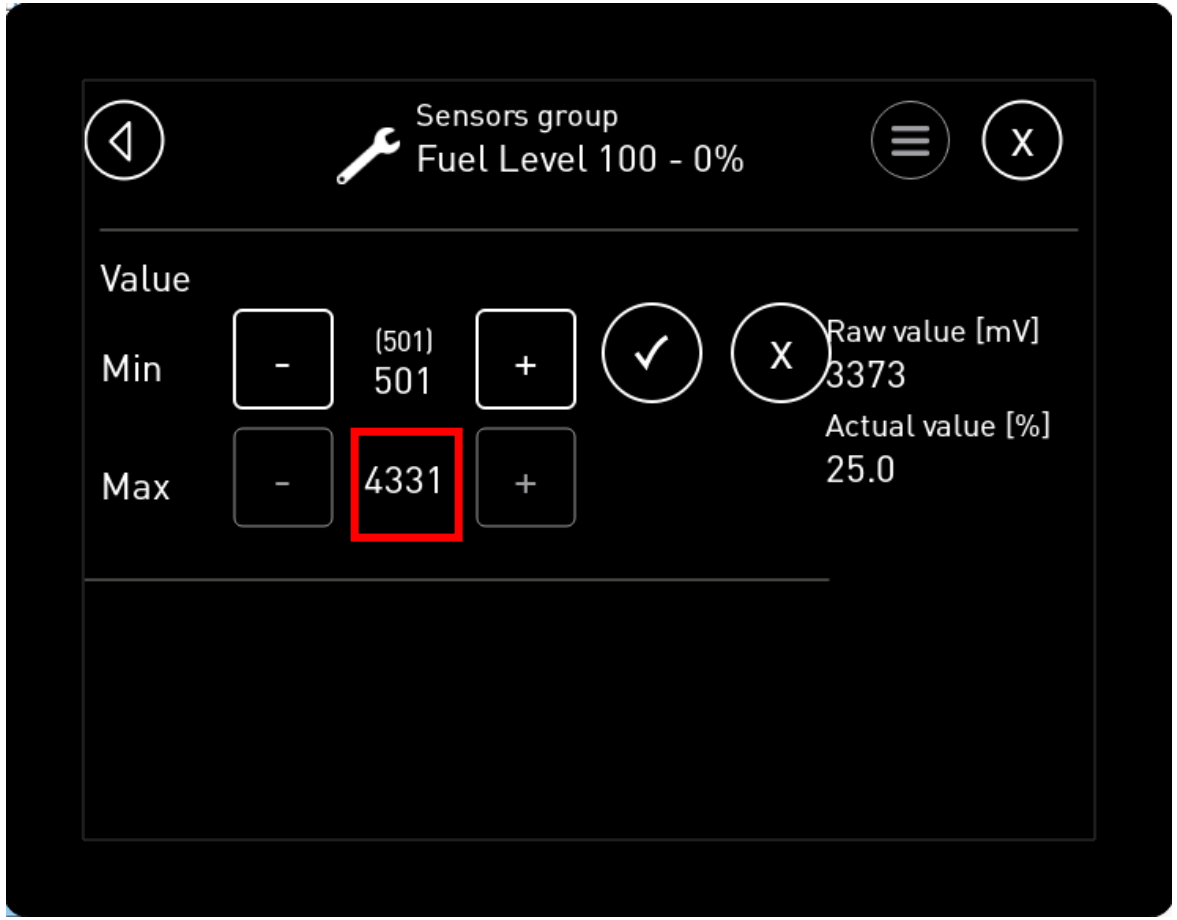

The new values should look like the next screen.

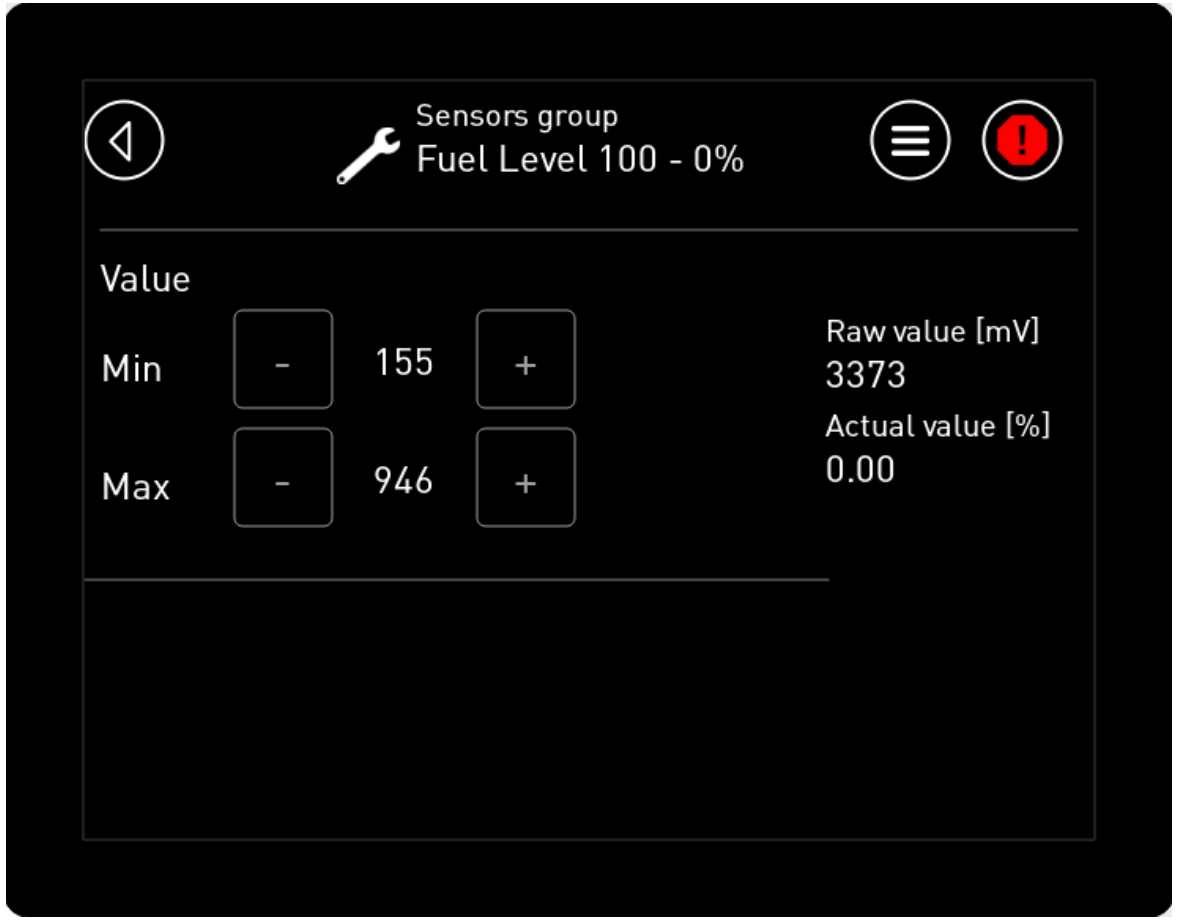

All values updated and complete. You can close out of the menu screens and return to the main home page.

