PODS 2015 & Older Podzilla Retrofit Lift Decal Instructions



Tools Needed:



- Grinder
  - Grinding Wheel
  - Cutting Wheel
- Tape Measure
- White Crayon or Utensil to Write on Painted Steel

Materials Needed:



- Podzilla Lift Decal - LSI108
- Cleaner/Degreaser – PODS Container Cleaner – Power Kleen
- Satin Black Spray Paint

Personal Protective Equipment:

- Steel Toed Shoes
- Safety Glasses
- Bump Cap
- Face Shield
- Cut Resistant Gloves
- Hearing Protection




PODS 2015 & Older Podzilla Retrofit Lift Decal Instructions:

1. On a Podzilla that is 2015 and older, locate the welded mounting brackets attaching the Podzilla “Rear Sign Pan” (LLA151) to the high spreader bar.

Note: The weld seam will be the cutting location.



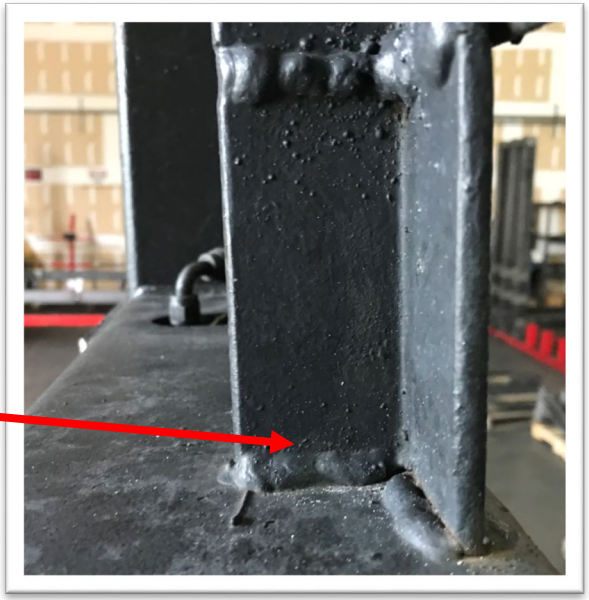


PODS 2015 & Older Podzilla Retrofit Lift Decal Instructions:

2. Using a grinder and a cutting wheel to cut along the top of the weld seam to remove the brackets attaching the Podzilla “Rear Sign Pan” (LLA151) to the high spreader bar.

Note: A reciprocating saw can also be used in this step.



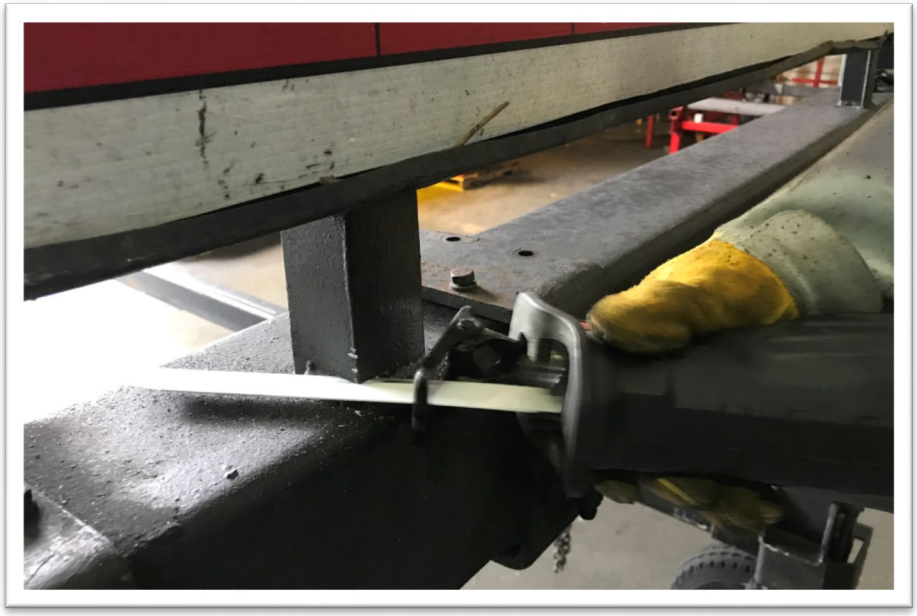


PODS 2015 & Older Podzilla Retrofit Lift Decal Instructions:

3. Once rear sign pan has been removed, use a grinder with a grinding wheel to remove the residual weld from the high spreader bar.





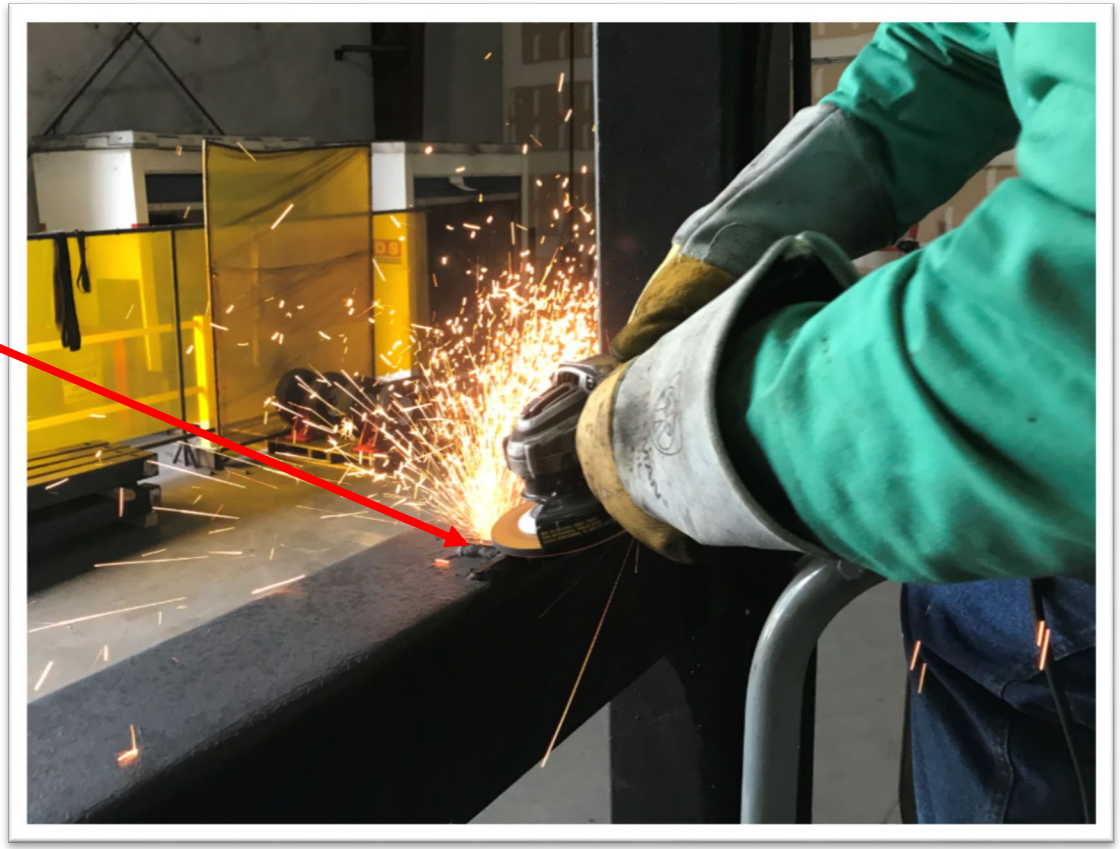


PODS 2015 & Older Podzilla Retrofit Lift Decal Instructions:

4. After grinding surface smooth, use satin black spray paint to cover raw steel.





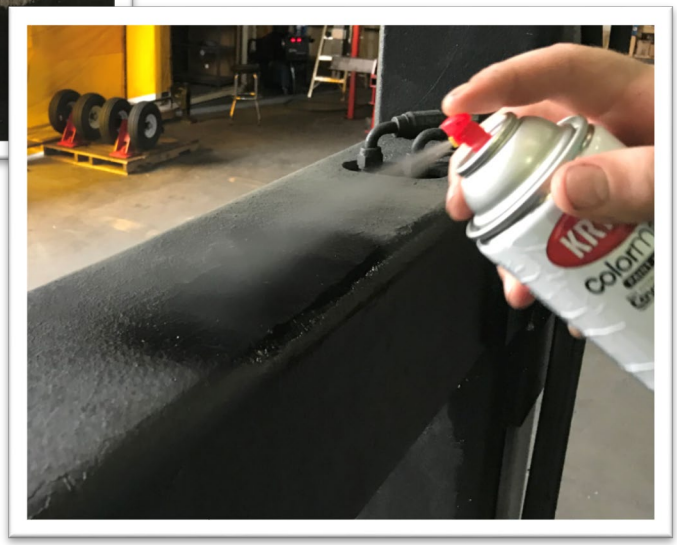

PODS Podzilla Retrofit Lift Decal Instructions:

5. Illustration of high spreader bar with rear sign pan removed.



PODS 2015 & Older Podzilla Retrofit Lift Decal Instructions:

6. Use a cleaner/degreaser such as PODS container cleaner from Power Kleen to clean the surface of the high spreader bar where the new decal will be installed.



PODS 2015 & Older Podzilla Retrofit Lift Decal Instructions:

7. Use a tape measure and white crayon or other writing utensil to place marks 1.5” from welds on both ends.







PODS 2015 & Older Podzilla Retrofit Lift Decal Instructions:

8. Remove backing from decal and place on surface starting at the pre-marked location and slowing apply evenly across high spreader bar.







PODS 2015 & Older Podzilla Retrofit Lift Decal Instructions:

9. Use a credit card or other object to smooth out decal and remove air bubbles.



PODS 2015 & Older Podzilla Retrofit Lift Decal Instructions:

10. Illustration of a finished decal on the Podzilla high spreader bar.



