PODS 2016+ Podzilla Retrofit Lift Decal Instructions



Tools Needed:



- ½” Wrench – QTY 2
  - Substitution – ½” Socket and Ratchet
- Tape Measure
- White Crayon or Utensil to Write on Painted Steel

Materials Needed:



- Podzilla Lift Decal - LSI108
- Cleaner/Degreaser – PODS Container Cleaner – Power Kleen

Personal Protective Equipment:


- Steel Toed Shoes
- Safety Glasses
- Bump Cap
- Cut Resistant Gloves
- Hearing Protection




PODS 2016+ Podzilla Retrofit Lift Decal Instructions:

1. On a Podzilla that is 2016 or newer, use ½” tools to remove the 4 nut and bolts attaching the Podzilla “Rear Sign Pan” (LLA151) to the high spreader bar.



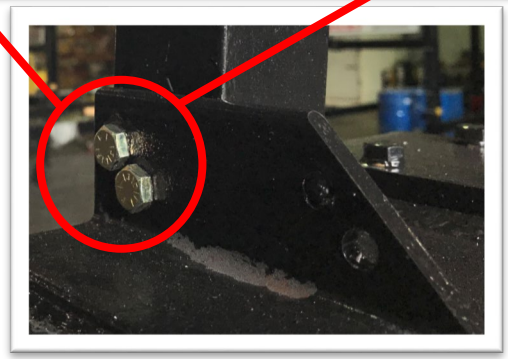

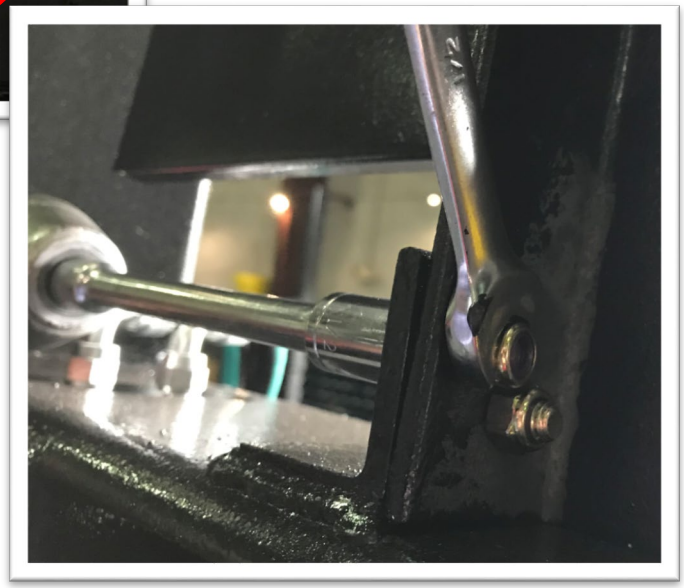

PODS Podzilla Retrofit Lift Decal Instructions:

2. Illustration of high spreader bar with rear sign pan removed.



PODS Podzilla Retrofit Lift Decal Instructions:

3. Use a cleaner/degreaser such as PODS container cleaner from Power Kleen to clean the surface of the high spreader bar where the new decal will be installed.





PODS Podzilla Retrofit Lift Decal Instructions:

4. Use a tape measure and white crayon or other writing utensil to place marks 1.5” from welds on both ends.







PODS Podzilla Retrofit Lift Decal Instructions:

5. Remove backing from decal and place on surface starting at the pre-marked location and slowing apply evenly across high spreader bar.







PODS Podzilla Retrofit Lift Decal Instructions:

6. Use a credit card or other object to smooth out decal and remove air bubbles.



PODS Podzilla Retrofit Lift Decal Instructions:

7. Illustration of a finished decal on the Podzilla high spreader bar.



