SCANRECO


4.6 Downloading ID: Pairing PCU and CU

Programs the unique ID-code required for radio communication between the Portable Control Unit and Central Unit. Typically the CU may store a maximum of 1 PCU ID-code. If another PCU is required to operate the CU via radio, the ID-code procedure is required to be done and the previous ID-code will be overwritten.

A.

Remove battery from PCU and connect tether cable between CU and PCU.

B.

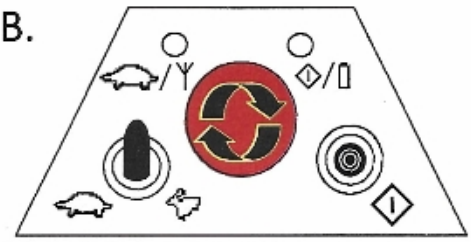

Release E-Stop; Rotate CW


C.

Remote / OFF / Manual Switch

Cycle power on CU -> Toggle switch from OFF (center) to Remote (up) position. *Step D. must be done within 45 seconds of C.*



D.

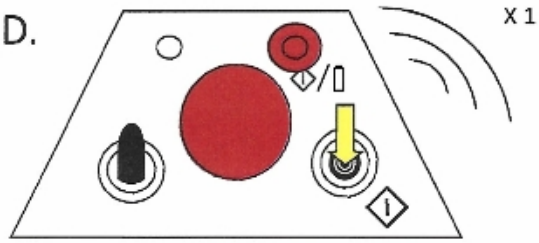

Press and hold Power Button (approx. 10 Seconds) until Power ON LED illuminates solid RED and Buzzer in PCU beeps once.

PCU ID is now being sent to CU.



E.

The PCU will beep in quick succession to confirm programming is completed.

F.

If this procedure does not work, repeat the programming (see items B-E). If it still does not work, contact Scanreco North America.