

INSTALLATION INSTRUCTIONS

(HORIZON) SCOUT PASS

Thank you for trusting Bestpass to manage your tolling needs! In an effort to reduce the number of misreads, please carefully read the following guidelines and installation instructions.



Your device is already active — no additional steps needed.

READ THESE IMPORTANT DETAILS FIRST!

Handling

Do not remove from plastic casing

Do not handle transponder more than necessary or set on the dashboard for any length of time

Do not deface the transponder in any way (e.g. additional stickers, marker, etc.) or a damage fee will be applied upon return

Location

Mount horizontally only

Do not apply behind the tint/frit band or windshield wipers, or near metallic surfaces

Allow 2 – 3" of space from other RFID tags to avoid interference

Adhesive

Do not use additional tape, glue, or other adhesives as it can result in the tag not working properly

It is recommended that the windshield surface temperature be between 70° – 100° F for optimal adhesion

While the device itself is transferable, the adhesive strips are not. Once the adhesive makes contact with the glass, do not attempt to remove or reposition it

Do not wash or disturb the transponder until the adhesive is cured which is 72 hours

Supplies Needed for Installation:

- CLEAN RAG OR PAPER TOWEL
- RUBBING ALCOHOL OR GLASS CLEANER
- TAPE MEASURE OR RULER

WARNING: If the recommended transponder placement creates a visual hazard or blindspot, make the necessary adjustments to ensure you have a safe, unobstructed view of the road.

STEP-BY-STEP INSTALLATION INSTRUCTIONS FOR HORIZON SCOUT PASS

1 Thoroughly clean the inside of the windshield


We recommend using a clean rag/paper towel and either rubbing alcohol or glass cleaner. Remove all contaminants and allow the surface to dry completely.




2 Locate optimal placement location

Using a tape measure or ruler and the specifications listed below, visually mark the installation location on the interior of the windshield. Slight adjustments may be necessary (see ***Important Details*** on reverse side.)



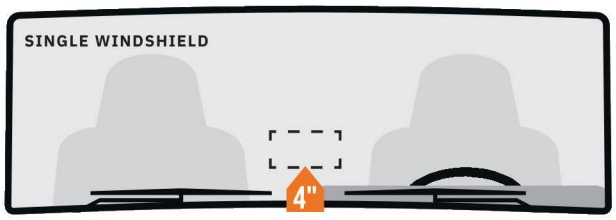

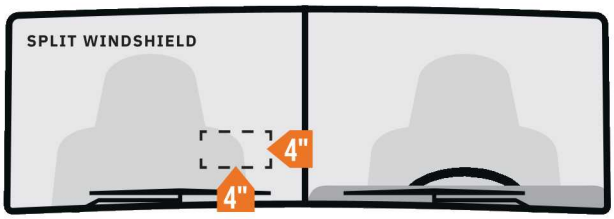

3 Remove adhesive backing

Carefully remove the adhesive backing strip, and avoid having the adhesive come into contact with your fingers or any other surfaces. Please do not remove backing until you are ready to install the device.



4 Apply transponder to windshield

Based on the measurements/placement determined in step 2, firmly press the transponder onto the windshield interior and hold for several seconds. If there is a problem during installation and new strips are needed, please use 3M™ Dual Lock™ reclosable fasteners only.





NEED ADDITIONAL SUPPORT?

PORTAL/HELP CENTER

support@bestpass.com