PODS Gen 6 Panel Painting



Tools Needed:



- 1/4” Impact Driver
- 9” x 5/16” Roller
- 9” x 3/8” General Purpose Roller Cover
- 2’ – 4’ Roller Extension
- Metal Paint Tray
- Paint Tray Liner
- Scotch-Brite Pad or 80 Grit Sandpaper
- Clean Rag
- Utility Knife
- Heavy Duty Power Mixer

When painting with the Sherwin Williams Steel Spec paint, a paint tray and liner MUST be used. Keep lid TIGHTLY closed when not pouring!





Materials Needed:



- Sherwin Williams Steel Spec Paint
  - PODS #: PPA102
  - SW #: B55W811
- 2” Blue 3M Painter Tape – Fastenal #: 0601675



Personal Protective Equipment:

- Steel Toed Shoes
- Safety Glasses
- Bump Cap
- Cut Resistant Gloves
- Hearing Protection

When painting and handling Steel Spec paint, the following shall be worn:

- Nitrile gloves
- Chemical goggles



PODS Gen 6 Panel Painting Procedure:

1. Pressure wash container following the “Pressure Washing Standards” and allow time to dry.

PODS Pressure Washing Standards




PODS Confidential and Proprietary 1

PODS Gen 6 Panel Painting Procedure:

2. If the PODS logo decals on the side panels are faded or damaged, they should be removed prior to the panels being prepared for painting. You may need to use a heat gun to heat up the surface to remove the decal.

Note: If the decal isn't damaged or worn, it can be left on the container panel. You will need to apply blue painters' tape to the edges of the decal prior to painting the panel.



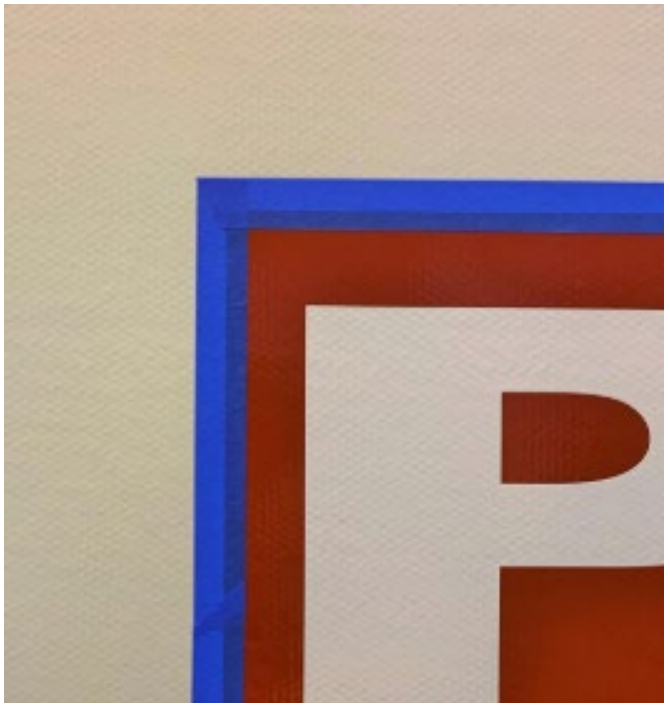


PODS Gen 6 Panel Painting Procedure:

3. Using a Scotch-Brite Pad or 80 grit sandpaper, prepare Gen 6 wall panel by lightly sanding the surface. This step is essential for paint to properly adhere to the surface.



PODS Gen 6 Panel Painting Procedure:

4. Using a rag, wipe away any debris on panel prior to painting.

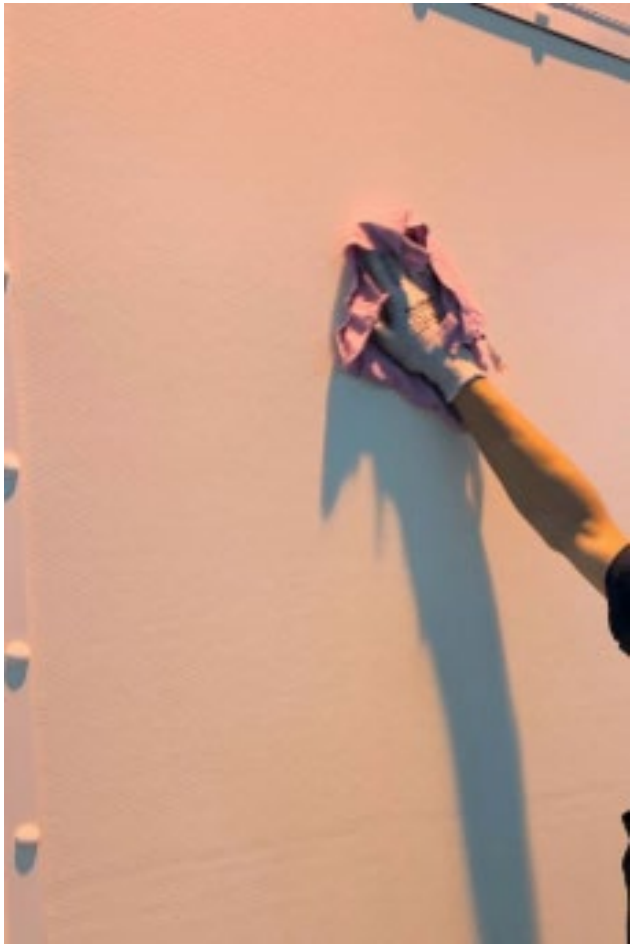

PODS Gen 6 Panel Painting Procedure:

5. Using a 9” x 3/8” roller, paint the panel using the Sherwin Williams Steel Spec paint.

Note: Paint entire panel, NO SPOT PAINTING.

When painting with the Sherwin Williams Steel Spec paint, a paint tray and liner MUST be used. Keep lid TIGHTLY closed when not pouring!

Pro Tip: Mix paint thoroughly using impact gun and power mixer.






PODS Gen 6 Panel Painting Procedure:

6. When painting is complete, and the paint is still wet, remove any blue painters' tape that was applied to the edges of the logo decals.

Note: If Decals were removed, proceed to next step.

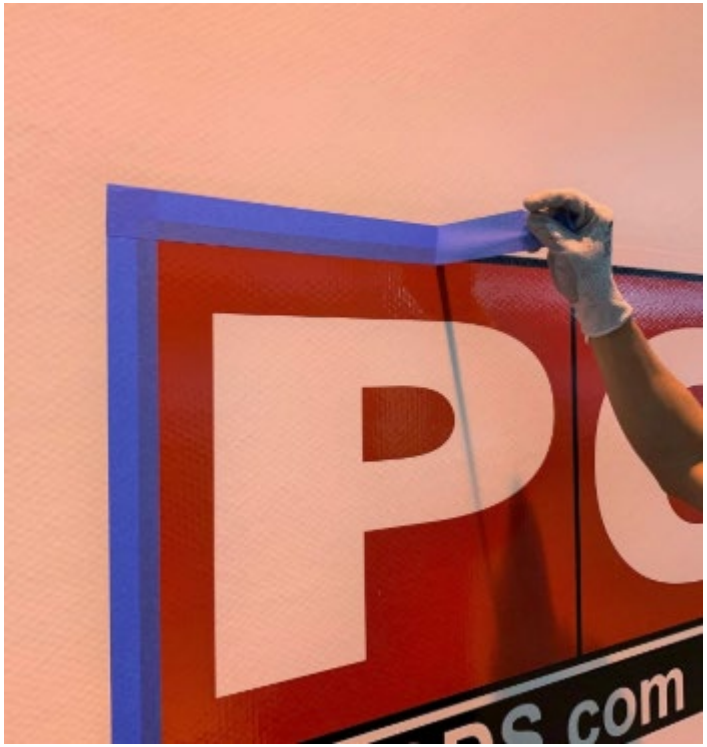

PODS Gen 6 Panel Painting Procedure:

7. After a 1-hour dry time, apply new Decal following the PODS “Large Decal Installation Instructions”.

