PODS Traditional Container Panel & Frame Painting



Tools Needed:



- 1/4” Impact Driver
- 9” x 5/16” Heavy Duty Roller
- 9” x 3/8” General Purpose Roller Cover
- 2’ – 4’ Roller Extension
- Metal Paint Tray
- Paint Tray Liner
- 3” Painters Tool
- Utility Knife
- Heavy Duty Power Mixer

When painting with the Sherwin Williams Steel Spec paint, a paint tray and liner MUST be used. Keep lid TIGHTLY closed when not pouring!





Materials Needed:



- Sherwin Williams Steel Spec Paint
  - PODS #: PPA102
  - SW #: B55W811
- 2” Blue 3M Painter Tape – Fastenal #: 0601675



Personal Protective Equipment:

- Steel Toed Shoes
- Safety Glasses
- Bump Cap
- Cut Resistant Gloves
- Hearing Protection

When painting and handling Steel Spec paint, the following shall be worn:

- Nitrile gloves
- Chemical goggles



PODS Traditional Panel & Frame Painting Procedure:

1. Pressure wash container following the “Pressure Washing Standards” and allow time to dry.



PODS Traditional Panel & Frame Painting Procedure:

2. Remove Coroplast PODS signs in preparation for painting.

Note: If the container will be having the roof replaced, remove roof prior to painting. Roof does not need to be removed if not being replaced.



PODS Traditional Panel & Frame Painting Procedure:

3. Using a painters' tool, remove any damaged gray or red tape. Follow the same procedure for the container ID labels and lift decals.



PODS Traditional Panel & Frame Painting Procedure:

4. Use blue painters' tape to cover any container ID labels, lift decals or gray and red tape that are in reusable condition.

Note: Use a utility knife to trim excess tape for a clean appearance.





PODS Traditional Panel & Frame Painting Procedure:


5. Using a 9” x 3/8” roller, paint the container panels and frame using the Sherwin Williams Steel Spec paint.


Note: If only painting the container frame, a 3” x 3/8” roller can be used.

When painting with the Sherwin Williams Steel Spec paint, a paint tray and liner MUST be used. Keep lid TIGHTLY closed when not pouring!

Pro Tip: Mix paint thoroughly using impact gun and power mixer.



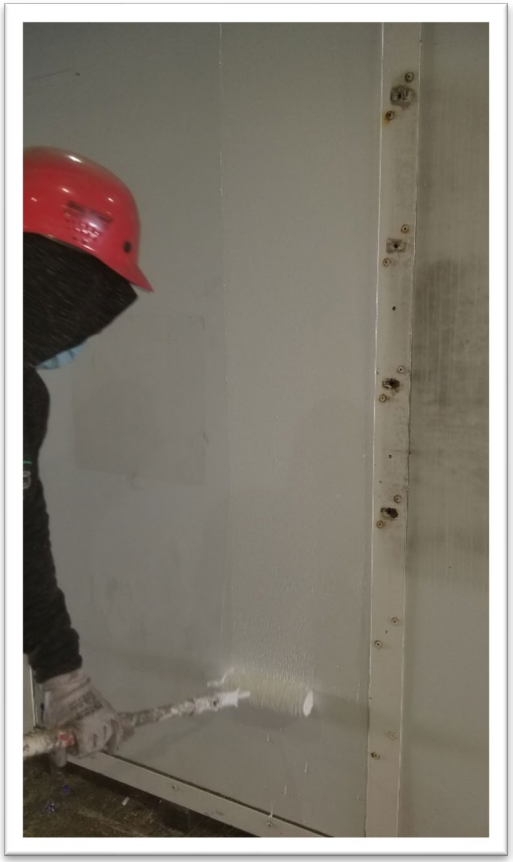

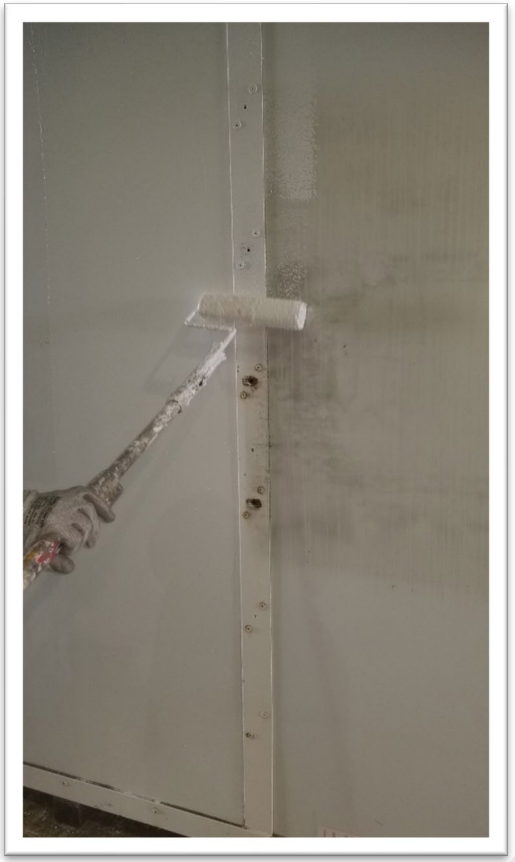

PODS Traditional Panel & Frame Painting Procedure:

6. When painting is complete, remove any blue painters' tape that was applied over labels or decals while paint is still wet.



PODS Traditional Panel & Frame Painting Procedure:

7. After a 1-hour dry time, apply any new ID labels, lift decals, gray and/or red tape.

Note: New or slightly used signs can be installed at this time, along with roof if a replacement was required. Sign and steel roof installation instructions should be followed.

